



# DP-1000

Wireless Presenter  
laser pen

## USER Manual

고객지원센터 디지시스㈜ / 080-777-0700

상담시간 10:00-17:00 (월-금)  
(토/일/공휴일 제외)

### 제품 보증서 [1년 무상보증]

|     |     |
|-----|-----|
| 모델명 | 구입처 |
| 구입일 | 고객명 |

\*제품 구입이 보증서로 소명됨을 기재한 후 양수증과 함께 보증서 두세장  
소지자 외에 분장기준을 적용 받으실 수 있습니다.  
\*법적인 제동을 받았음으로 사용불 가능 보증서는 연으로 단축됩니다.

#### [보증기간]


| 보증기간             | 신규 제품 수령 |      | 보유제품 |      |
|------------------|----------|------|------|------|
|                  | 보증기간     | 보증기간 | 보증기간 | 보증기간 |
| 신규 제품 수령 후 1년 이내 | 1년       | 1년   | 1년   | 1년   |
| 신규 제품 수령 후 1년 이상 | 1년       | 1년   | 1년   | 1년   |
| 신규 제품 수령 후 1년 이상 | 1년       | 1년   | 1년   | 1년   |
| 신규 제품 수령 후 1년 이상 | 1년       | 1년   | 1년   | 1년   |

Thank you for purchasing the K-vim DP-1000 Wireless Presenter laser pen. Please read this user manual carefully and keep it for future reference. If you need any assistance, please contact our support team with your product model number and order number.

**Package Contents**  
Wireless Presenter  
User Manual  
Warranty Card

#### Product Diagram

- On / Off Switch
- LED Indicator
- Page Up
- Page Down
- Laser Button
- Battery Slot
- Laser Pointer
- USB Receiver

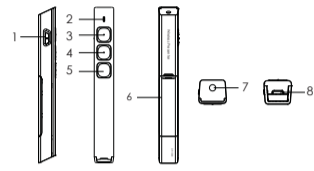

#### Specifications

|                     |                                      |
|---------------------|--------------------------------------|
| Model               | DP-1000                              |
| Frequency           | 2.4GHz                               |
| Receiver Interface  | USB 2.0                              |
| Operation Range     | Up to 30m / 98ft                     |
| Laser Color         | Red                                  |
| Output              | 0.4 - 0.8mW                          |
| Wavelength          | 650nm                                |
| Power Supply        | One A.A.A. battery                   |
| System Requirements | Windows, Mac OS                      |
| Dimensions          | 138 × 18 × 15mm / 5.4" × 0.7" × 0.6" |
| Weight              | 36g / 1.3oz                          |

- 01 -

#### Getting Started

Insert one A.A.A. battery into the battery slot. Turn power switch on. The LED indicator will illuminate for 3 seconds.

#### Mode Switch

The default mode is for Windows PowerPoint presentations. To enter Mac Keynote mode, press the Page Up and Page Down button simultaneously for 3 seconds, and the LED indicator will flash 3 times per second. Press these two buttons again for 3 seconds to switch back to Windows mode.

| LED Indicator                      | Status                  |
|------------------------------------|-------------------------|
| LED on for 3 seconds               | Power on                |
| LED flashes twice per second       | Low battery             |
| LED flashes three times per second | Mac Keynote mode        |
| LED flashes once per second        | Windows PowerPoint mode |

#### Presentation Controls

|                   |  |
|-------------------|--|
| Previous slide    | Press the Page Up button once                              |
| Next slide        | Press the Page Down button once                            |
| Full screen       | Press the Page Up button for 4 seconds                     |
| Exit full screen  | Simultaneously press the Page Up and Page Down button once |
| Black screen      | Press the Page Down button for 4 seconds                   |
| Exit black screen | Press the Page Up or Page Down button once                 |
| Laser             | Press and hold the Laser button                            |

#### Caution

Do not shoot the laser beam into your eyes, or into the eyes of others.

#### Warranty & Customer Support

For questions, assistance or warranty claims, please contact us at the address below that corresponds with your region. Please include your Amazon order number and product model number.

- 02 -